




REDPATH BATTEN TAPE

FOR ISOLATING COVERS / BATTENS ON THE STRUCTURE

INSTRUCTIONS

- Typically –a 25mm wide x 19mm thick batten is sufficient. Redpath aluminium battens are available also.
- If timber battens are tanalised, ensure that they are dry and painted white with an acrylic based paint.
- Plane one side of the batten –and round the lower edges (face to film).
- Tape should be applied to the full length of the battens lower edge (face to film)
- Install battens onto all rafters plus also ridgelines & end frames in high wind areas.
- Do not apply tapes or battens in temperatures below 10° C, or to wet or dirty covers.
- Do not install batten until desired final tension on film is achieved.
- Use a screw to secure the batten at 200mm intervals through centre of tape.
- Batten tape is available in 24mm & 48mm widths to suit– differing applications. Check with Redpath to ascertain ideal size for your application.

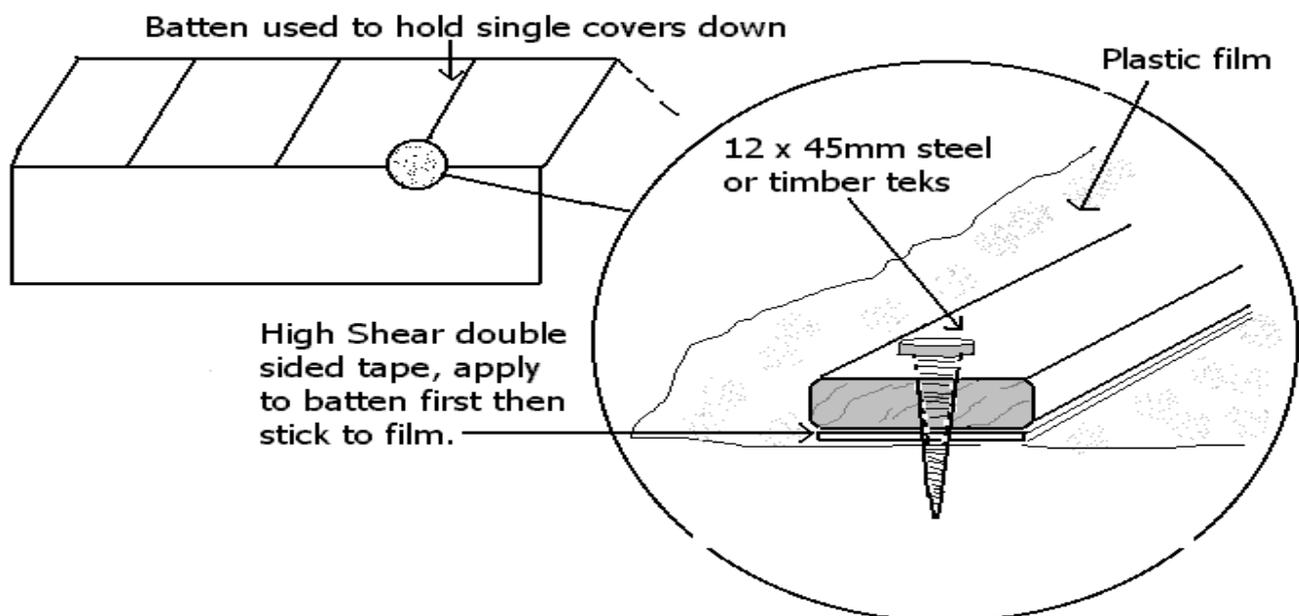

Email: redpath@redpath.co.nz

www.redpath.co.nz

Ph: 0508-733-728